



FOXGUARD

AUTO PROBE



Probe Test Pin

This pin is used to test the condition of wires

LED

The LED display's the condition of the wire :

RED = Positive Voltage

BLUE = Ground

Switch

The switch is used to supply a desired polarity to the Probe Test Pin :

UP = Positive Polarity Supply

DOWN = Ground Polarity Supply

Reset

When a short occurred while supplying a polarity to the test pin will cause the internal trip switch to trip and stop supplying the selected polarity to the test pin . To reset the internal trip switch press the Reset

OPERATING VOLTAGE : +12V to +24V